

BaBylissPRO®

Operating Instructions
Model FX765C
Outlining Trimmer



For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

Avant que votre appareil vous procure en toute sécurité beaucoup de satisfaction, lire attentivement le mode d'emploi.



Directives d'utilisation
Modèle FX765C
Tondeuse de finition

BaBylissPRO®

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER — To reduce the risk of electric shock:

1. **Do not reach for an appliance that has fallen into water. Unplug immediately.**
2. Do not use appliance while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquids.
4. ***Always unplug this appliance from the electrical outlet immediately after using.***
5. Unplug this appliance before cleaning or putting on or taking off parts.

WARNING — To reduce the risk of burns, electric shock, fire, or injury to persons:

1. **An appliance should never be left unattended when plugged in.**
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. **Never operate this appliance if it has a damaged cord or plug, if it**

is not working properly, or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized Service Center for examination and repair.

5. Keep the cord away from heated surfaces.
6. Never operate the appliance with the air openings blocked, or while it is on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair and the like.
7. Never drop or insert any object into any opening.
8. Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
9. Do not use this appliance with a damaged or broken comb or blade, as injury may occur.
10. Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to OFF, then remove plug from outlet.
11. **Do not pull, twist, or wrap line cord around appliance. Continuous stress on cord can damage cord insulation and result in a shock hazard.**
12. Do not place appliance on any surface while it is operating.
13. Avoid skin contact with moving blades.
14. Be mindful of tangles or kinks in the cord. If the cord does become tangled during use, turn the unit off and straighten cord before operating again.
15. Keep lubricating oil away from children. See warning on bottle.
16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

SAVE THESE INSTRUCTIONS



OPERATING INSTRUCTIONS

This commercial hair clipper is designed for human use only. Use on Alternating Current 120V AC (60 hertz) only. To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in the outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not attempt to defeat this safety feature or change the plug in any way.

OILING THE BLADES

About once a month, you should oil the trimmer blades with the oil provided in your kit. It is best to do this over a piece of newspaper. Turn the trimmer on and hold it so that the blades are pointed downward. Spread one drop of oil across the blades, then turn the trimmer off and wipe away the excess oil with a soft cloth.

Be careful not to use too much oil and don't oil your trimmer more than necessary, as this could damage the motor. (Never attempt to oil the motor bearing, as it is permanently lubricated). Keep oil out of reach of children.

Do not pull, twist, or wrap line cord around appliance. Continuous stress on cord can damage cord insulation and result in shock.

VERY IMPORTANT: Blades must be cleaned and oiled on a regular basis for proper functioning. Failure to regularly clean and oil the blades will void the warranty.


STORAGE:

when not in use, your appliance is easy to store. allow appliance to cool, then store out of reach of children in a safe, dry location. Don not jerk or strain cord at plug connections.

REPLACING (REMOVING) BLADE SET


To remove the FX765C blade set, turn the trimmer to the OFF position and unplug it from the electrical outlet. Turn the trimmer upside down so that the teeth of the trimmer are facing down. Place the trimmer on a flat surface and using the screwdriver, loosen the fastening screws from the blade set. Remove the blade set from the trimmer (see Fig. 1).

Fig. 1

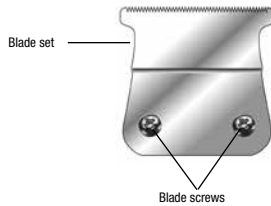


To install or replace your trimmer blade set, reverse the procedure, aligning the blade cushion shaft into the moving blade bracket (see Fig. 2). With the blade held in place, replace blade screws and tighten loosely. Turn the trimmer over and align the blade set parallel to the trimmer's upper housing.

Fig. 2

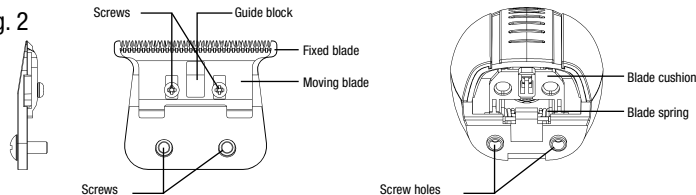

Be sure that the blades are aligned properly. The teeth of the smaller blade (cutter) should rest slightly below the upper edge of the larger blade (comb) approximately 1/64" to 1/32" apart (see Fig. 3). If the blades are not correctly aligned, they may cut or scratch your skin when trimming. Once the blades have been aligned, tighten the screws firmly.

Fig. 3

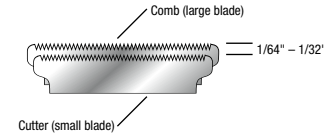


BLADE CARE

Because the trimmer blades are precision-made for a very special use, they should always be handled with care. Each time you finish using the trimmer, take the cleaning brush provided and brush away any loose hair that has collected in the blades.

Be especially careful when changing or adjusting blades. When you have your trimmer serviced, be sure that both blades are sharpened or replaced at the same time.

**WARNING:
IF YOU THINK THE
POWER IS OFF WHEN
THE SWITCH IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER



Everyone knows that electricity and water are a dangerous combination. But did you know that an electrical appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

**ALWAYS UNPLUG
SMALL APPLIANCES**

**IF YOU LIVE OUTSIDE CANADA,
PLEASE CONTACT YOUR LOCAL DISTRIBUTOR.**

CANADIAN TWO YEAR REPLACEMENT WARRANTY

Dannycos Professional is the exclusive Canadian distributor of this product. We offer the following excellent warranty on your professional electrical appliance. Keep your sales slip. This is your proof of purchase and your guarantee. This guarantee is not valid in case of abuse, misuse, alterations or repairs done by unauthorized persons. Before returning your defective electrical product, please read the warranty conditions listed in this brochure.

Should your professional electrical appliance possess a manufacturer's defect, it may be exchanged by your distributor or Dannycos Professional at no charge within a TWO YEAR from date of purchase, if the electrical appliance is accompanied by a proof of purchase.

If you are sending your defective appliance which is covered by this guarantee, directly to the Dannycos Professional Service Center, it must be accompanied by the following:

- 1) your dated sales slip;
- 2) a precise description of the defect;
- 3) your complete return address and daytime phone number; and,
- 4) a \$10 money order for postage and handling

Please return your defective appliance to:

ATTN: Dannyco Professional Service Center
CONAIR CONSUMER PRODUCTS ULC

100 Conair Parkway
Woodbridge, Ontario
L4H 0L2

This warranty applies only to residents of Canada. Products shipped from outside of Canada will not be processed and will not be returned to sender.

For questions regarding this product,
you may call Dannyco Professional's Service Centre at:
1-800-363-0707, or email us at customerservice@dannyco.com.

IB-17/126

IMPORTANTES CONSIGNES DE SÉCURITÉ

L'utilisation d'appareils électriques requiert la prise de précautions élémentaires, parmi lesquelles les suivantes :

LIRE TOUTES LES INSTRUCTIONS AVANT L'UTILISATION *GARDER LOIN DE L'EAU*

DANGER — Afin de réduire le risque de choc électrique :

1. **Si l'appareil tombe à l'eau, ne pas tenter de rattraper ; le débrancher immédiatement.**
2. Ne pas utiliser dans le bain ou la douche.
3. Ne pas placer ou ranger l'appareil dans un endroit où il peut tomber ou être entraîné dans une baignoire ou un lavabo. Ne pas placer ou laisser tomber l'appareil dans l'eau ou tout autre liquide.
4. **Débrancher immédiatement après usage.**
5. Débrancher l'appareil avant toute manipulation ou entretien.

AVERTISSEMENT — Afin de réduire le risque de brûlures, de décharge électrique, d'incendie ou de blessures :

1. **Une fois branché, ne pas laisser l'appareil sans surveillance.**
2. Cet appareil ne devrait pas être utilisé par, sur ou près d'enfants ou de personnes atteintes de certains handicaps.
3. Utiliser cet appareil uniquement aux fins indiquées dans ce manuel. Utiliser uniquement les accessoires recommandés par le fabricant.
4. **Ne pas utiliser l'appareil si le cordon d'alimentation ou la fiche sont endommagés, s'il ne fonctionne pas correctement, s'il est abîmé ou**

après qu'il soit tombé ou tombé à l'eau ; le renvoyer à un centre de services autorisé afin qu'il soit inspecté et réparé.

5. Tenir le cordon d'alimentation éloigné des surfaces chaudes.
6. Ne pas obstruer les ouvertures ou placer l'appareil sur une surface molle telle qu'un lit ou un divan, où elles pourraient se boucher. Vérifier que les ouvertures ne sont pas obstruées par des peluches, cheveux ou autres saletés.
7. Ne rien introduire ni laisser tomber dans les ouvertures.
8. Ne pas utiliser à l'air libre ou dans des endroits où l'on utilise des produits aérosols (spray) ou où l'on administre de l'oxygène.
9. Afin d'éviter les risques de blessure, ne pas utiliser l'appareil si le guide ou les lames sont endommagés.
10. Toujours connecter le cordon électrique à l'appareil avant de le brancher dans la prise de courant. Toujours éteindre ("OFF") l'appareil avant de le débrancher.
11. **Ne pas tirer, tordre ou enrouler le cordon d'alimentation autour de l'appareil. Une tension continue sur le cordon peut l'endommager et entraîner un risque d'électrocution.**
12. Ne pas déposer l'appareil alors qu'il est allumé.
13. Éviter tout contact avec les lames en mouvement.
14. Éviter d'utiliser l'appareil si le cordon est entortillé. Si le cordon s'entortille pendant l'utilisation, éteindre l'appareil et désentortiller le cordon.
15. Garder l'huile lubrifiante hors de portée des enfants. Voir les précautions d'emploi sur la bouteille.
16. En cas de dommage, le cordon électrique ne devrait être remplacé que par le fabricant, un technicien autorisé ou un électricien professionnel.

GARDER CES INSTRUCTIONS



DIRECTIVES D'UTILISATION

Cette tondeuse professionnelle est conçue pour couper les cheveux uniquement. Le brancher sur courant alternatif (60Hz) de 120 V AC uniquement. Cet appareil est doté d'une fiche polarisée (une broche est plus large que l'autre). Par mesure de sécurité, cette fiche s'insèrera dans la prise de courant d'une seule façon. Si la fiche ne s'insère pas bien, la renverser. Si elle ne s'insère toujours pas, contacter un électricien. Ne jamais contraindre cette mesure de sécurité ou essayer de modifier la prise.

LUBRIFICATION

Lubrifier les lames environ une fois par mois avec l'huile lubrifiante fournie, de préférence au-dessus d'une feuille de papier journal. Tenir la tondeuse à l'envers et l'allumer. Verser une goutte d'huile sur les lames, éteindre l'appareil, et essuyer le surplus d'huile à l'aide d'un linge doux.

Prendre garde de ne pas utiliser trop d'huile et de ne pas lubrifier l'appareil plus que nécessaire ; cela pourrait endommager le moteur. Ne pas essayer de lubrifier les roulements du moteur, qui sont lubrifiés à vie. Garder l'huile hors de portée des enfants.

Ne pas tirer, tordre ou enrouler le cordon d'alimentation autour de l'appareil. Une tension continue sur le cordon peut l'endommager et entraîner un risque d'électrocution.

TRÈS IMPORTANT : il est essentiel de nettoyer et lubrifier les lames régulièrement afin d'assurer le bon fonctionnement de l'appareil. Le non-respect de ces instructions annulera la garantie.


RANGEMENT :

Lorsque vous ne l'utilisez pas, l'appareil est facile à ranger. Le laisser refroidir, puis le garder dans un endroit sûr et sec, hors de portée des enfants. Ne pas tirer ou plier le cordon, particulièrement au niveau de la fiche.

REPLACEMENT (RETRAIT) DES LAMES


Éteindre et débrancher l'appareil. Retourner l'appareil de façon à ce que les lames pointent vers le bas. Poser l'appareil. Retirer les vis qui tiennent les lames en place à l'aide d'un tournevis. Retirer le jeu de lames (Fig. 1).

Fig. 1

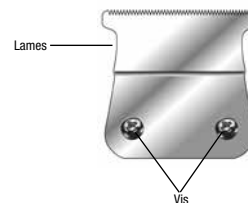


Pour remettre les lames en place ou installer un nouveau jeu de lames, poser les lames sur la tête de la tondeuse, en alignant l'axe du coussin avec le guide de la lame mobile (Fig. 2). Remettre les vis en place, sans trop serrer. Retourner la tondeuse et aligner les lames.

Fig. 2

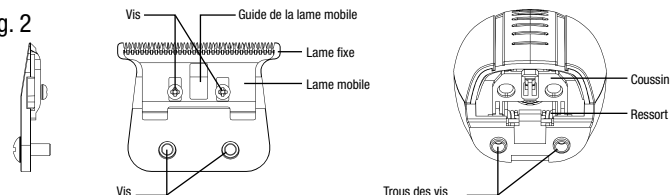

Vérifier que les lames sont bien alignées. Les dents de la lame mobile (petite lame) doivent être 0,5 mm à 1 mm en dessous de celles de la lame fixe (grande lame) (Fig.3). Des lames mal alignées peuvent provoquer des égratignures ou des coupures pendant la coupe. Une fois que les lames sont alignées, serrer les vis.

Fig. 3

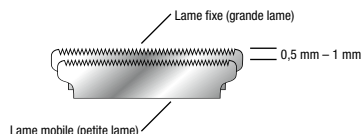


ENTRETIEN DES LAMES

Les lames de votre tondeuse ont été fabriquées avec précision, pour un usage spécifique, et demandent un entretien particulier. Nettoyer les lames après chaque utilisation, à l'aide de la brosse de nettoyage fournie.

Le remplacement et l'entretien des lames demandent une attention toute particulière. Toujours s'assurer que les deux lames sont remplacées/affûtées en même temps.

**AVERTISSEMENT :
SI VOUS PENSEZ
QUE LE COURANT
EST COUPÉ PARCE
QUE L'APPAREIL EST
ÉTEINT, VOUS VOUS
TROMPEZ.**

GARDER LOIN DE L'EAU



Tout le monde sait que l'eau et l'électricité ne font pas bon ménage, mais saviez-vous qu'un appareil est toujours sous tension, même lorsqu'il est éteint? S'il est branché, il est sous tension. Alors, si vous n'utilisez pas l'appareil, débranchez-le.

**DÉBRANCHEZ TOUJOURS
LES PETITS APPAREILS ÉLECTRIQUES**

**SI VOUS RÉSIDEZ À L'EXTÉRIEUR DU CANADA,
VEUILLEZ COMMUNIQUER AVEC VOTRE DISTRIBUTEUR LOCAL.**

GARANTIE DE REMPLACEMENT CANADIENNE DE DEUX ANS

Dannycos Professionnel est le distributeur canadien exclusif de cet appareil électrique professionnel. Nous offrons la garantie exceptionnelle suivante sur votre appareil électrique professionnel. Conservez votre reçu de caisse, car c'est votre preuve d'achat et votre garantie. Cette garantie n'est pas valide si des personnes non autorisées ont fait un mauvais usage de l'appareil, ont tenté de le modifier ou de le réparer. Avant de retourner l'appareil électrique défectueux, veuillez lire les conditions de garantie inscrites à l'intérieur de ce dépliant.

Si votre appareil électrique professionnel présente un défaut de fabrication à l'intérieur DE DEUX ANS suivant la date d'achat, vous pouvez l'échanger sans frais en le retournant à votre distributeur ou directement à Dannycos Professionnel, s'il est accompagné d'une preuve d'achat.

Si vous retournez l'appareil défectueux toujours sous garantie directement à Dannycos Professionnel, il doit être accompagné :

- 1) de votre reçu de caisse daté;
- 2) d'une description précise du problème;
- 3) de votre adresse de retour complète et votre numéro de téléphone de jour; et
- 4) d'un mandat-poste de 10 \$ pour couvrir les frais de port et de manutention

Veillez retourner l'appareil défectueux à:

ATT. : Centre De Service Dannycos Professionnel

CONAIR CONSUMER PRODUCTS ULC

100 Conair Parkway

Woodbridge, Ontario

L4H 0L2

Cette garantie s'applique uniquement aux résidents canadiens. Nous ne traiterons pas les produits provenant de l'extérieur du Canada et ne les retournerons pas à l'expéditeur.

Si vous avez des questions concernant ce produit, communiquez avec le centre de service Dannycos Professionnel au: 1-800-363-0707 ou écrivez à customerservice@dannycos.com.